




零件图

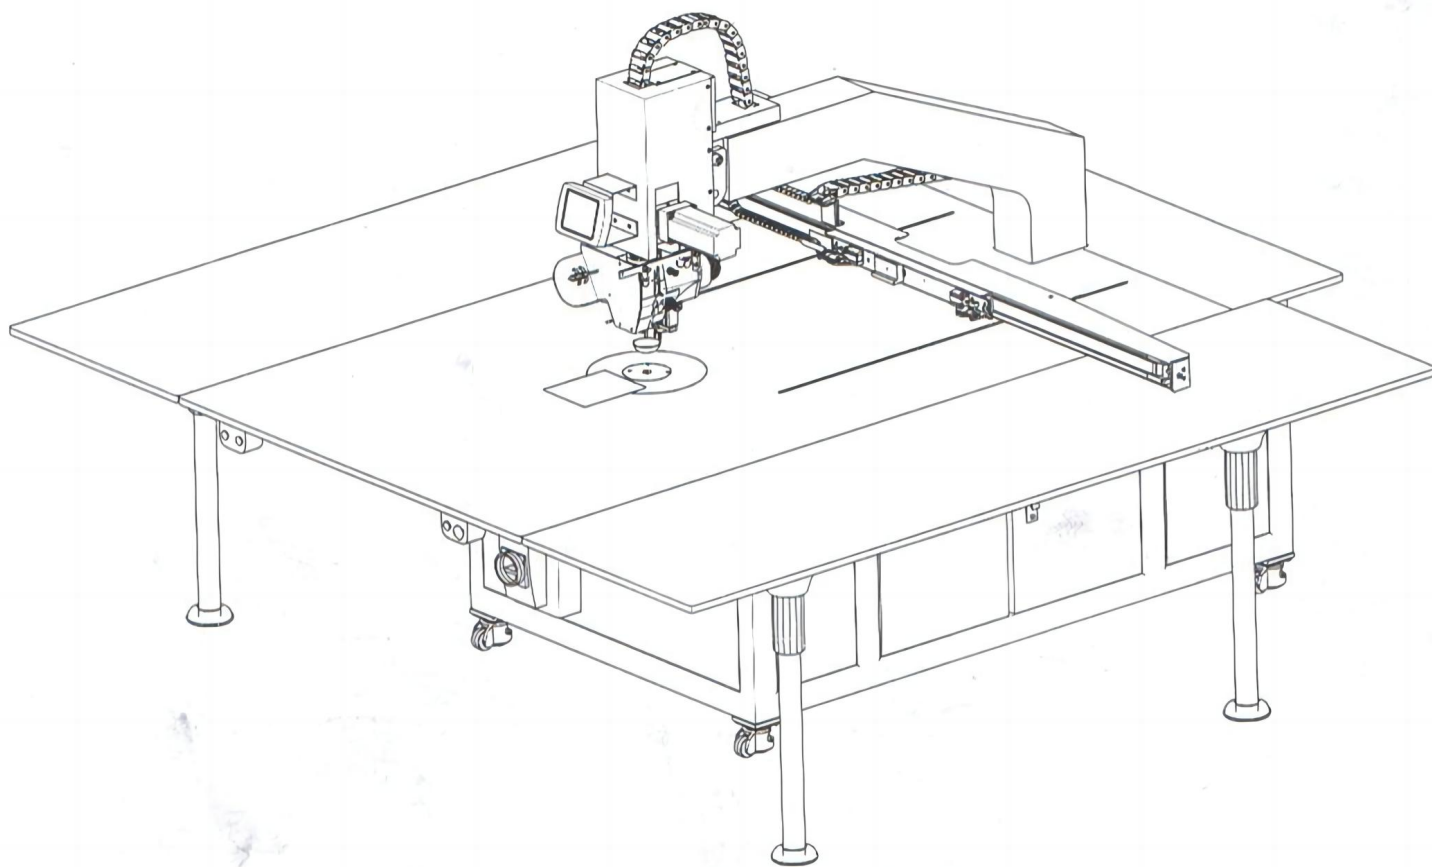

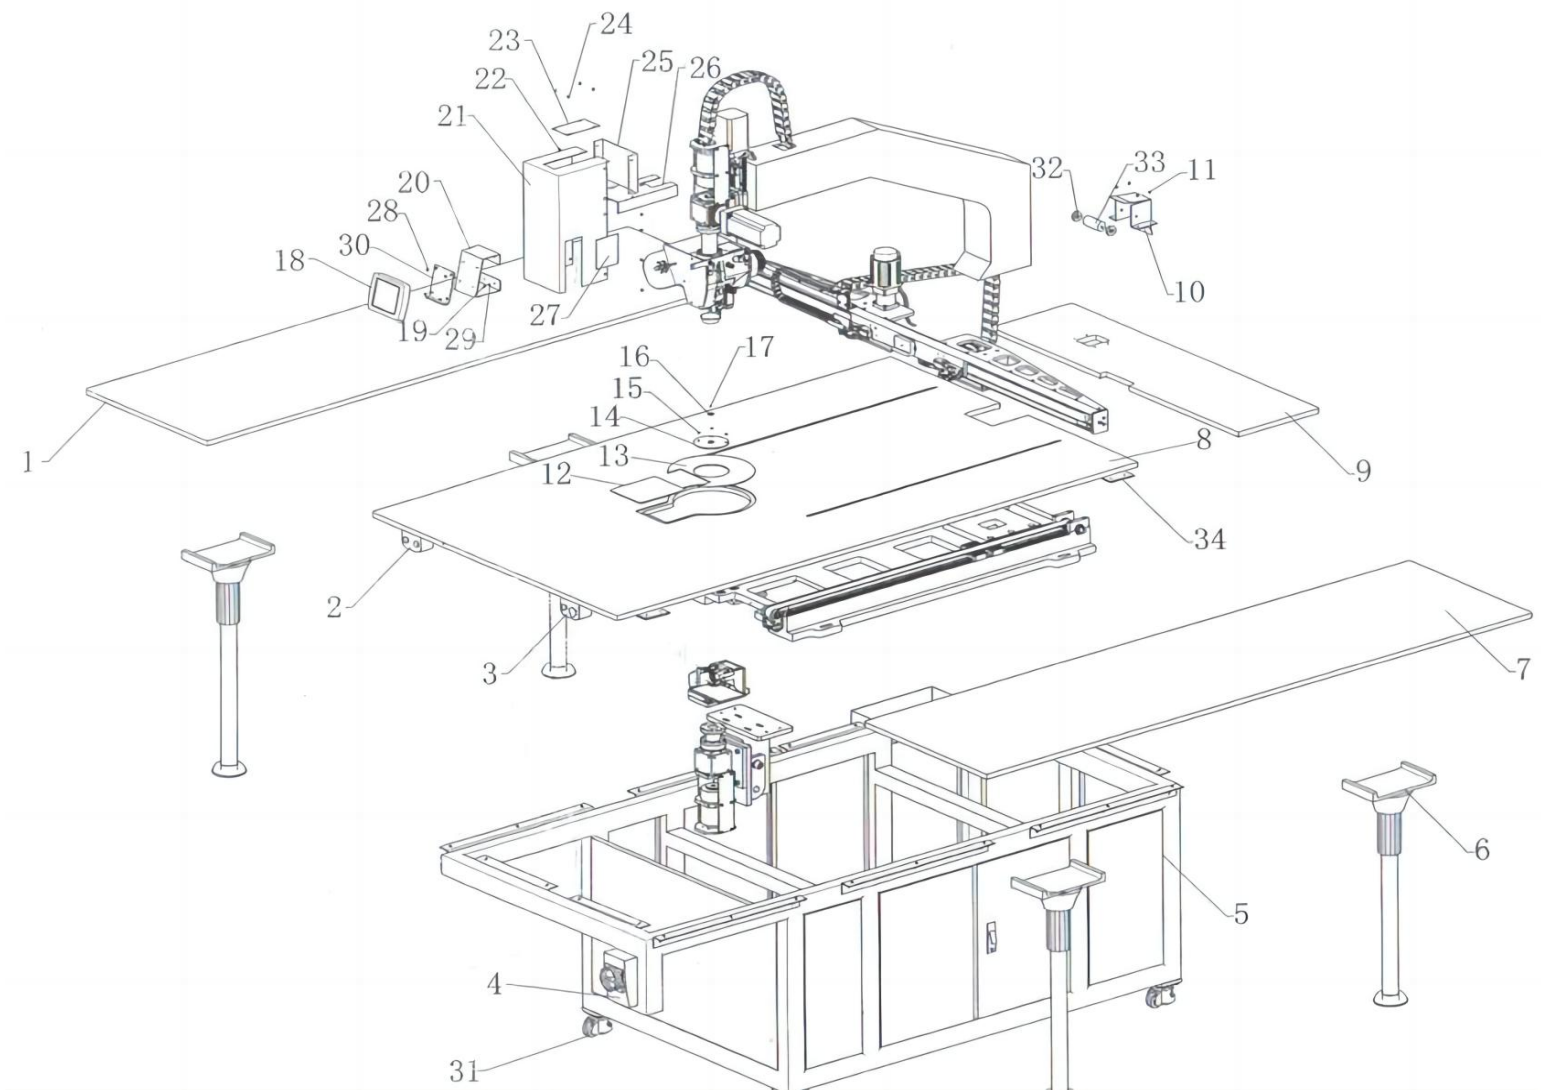


参照号	零部件序号	数量	零部件名称
1	jh2150	1	左副台板
2	jh2151	1	启动、夹框按钮
3	jh2152	1	换梭、急停按钮
4	jh2153	1	电源开关
5	jh2154	1	机架
6	jh2155	4	支撑脚
7	jh2156	1	右副台板
8	jh2157	1	主台板
9	jh2158	1	后台板
10	jh2159	1	滚轮罩
11	jh2160	4	自攻螺钉
12	jh2161	1	梭箱面板 A
13	jh2162	1	梭箱面板 B
14	jh2163	1	针板
15	jh2164	3	螺钉: GB/T818 M3×6
16	jh2165	1	针孔板
17	jh2166	2	螺钉: GB/T818 M1.6×6
18	jh2167	1	显示屏
19	jh2168	4	螺钉: GB/T818 M5×6
20	jh2169	1	显示屏连接架
21	jh2170	1	机头罩 1
22	jh2171	10	螺钉: GB/T818 M5×8
23	jh2172	1	上盖板
24	jh2173	4	螺钉: GB/T77 M4×6
25	jh2174	1	后盖板
26	jh2175	1	机头罩 2
27	jh2307	1	侧挡板
28	jh2308	4	螺钉: GB/T77 M4×6
29	jh2309	4	平垫圈
30	jh2310	1	显示屏支撑架
31	jh2311	4	机架移动脚
32	jh2312	2	轴承
33	jh2313	3	滚轮
34	jh2314	2	固定片

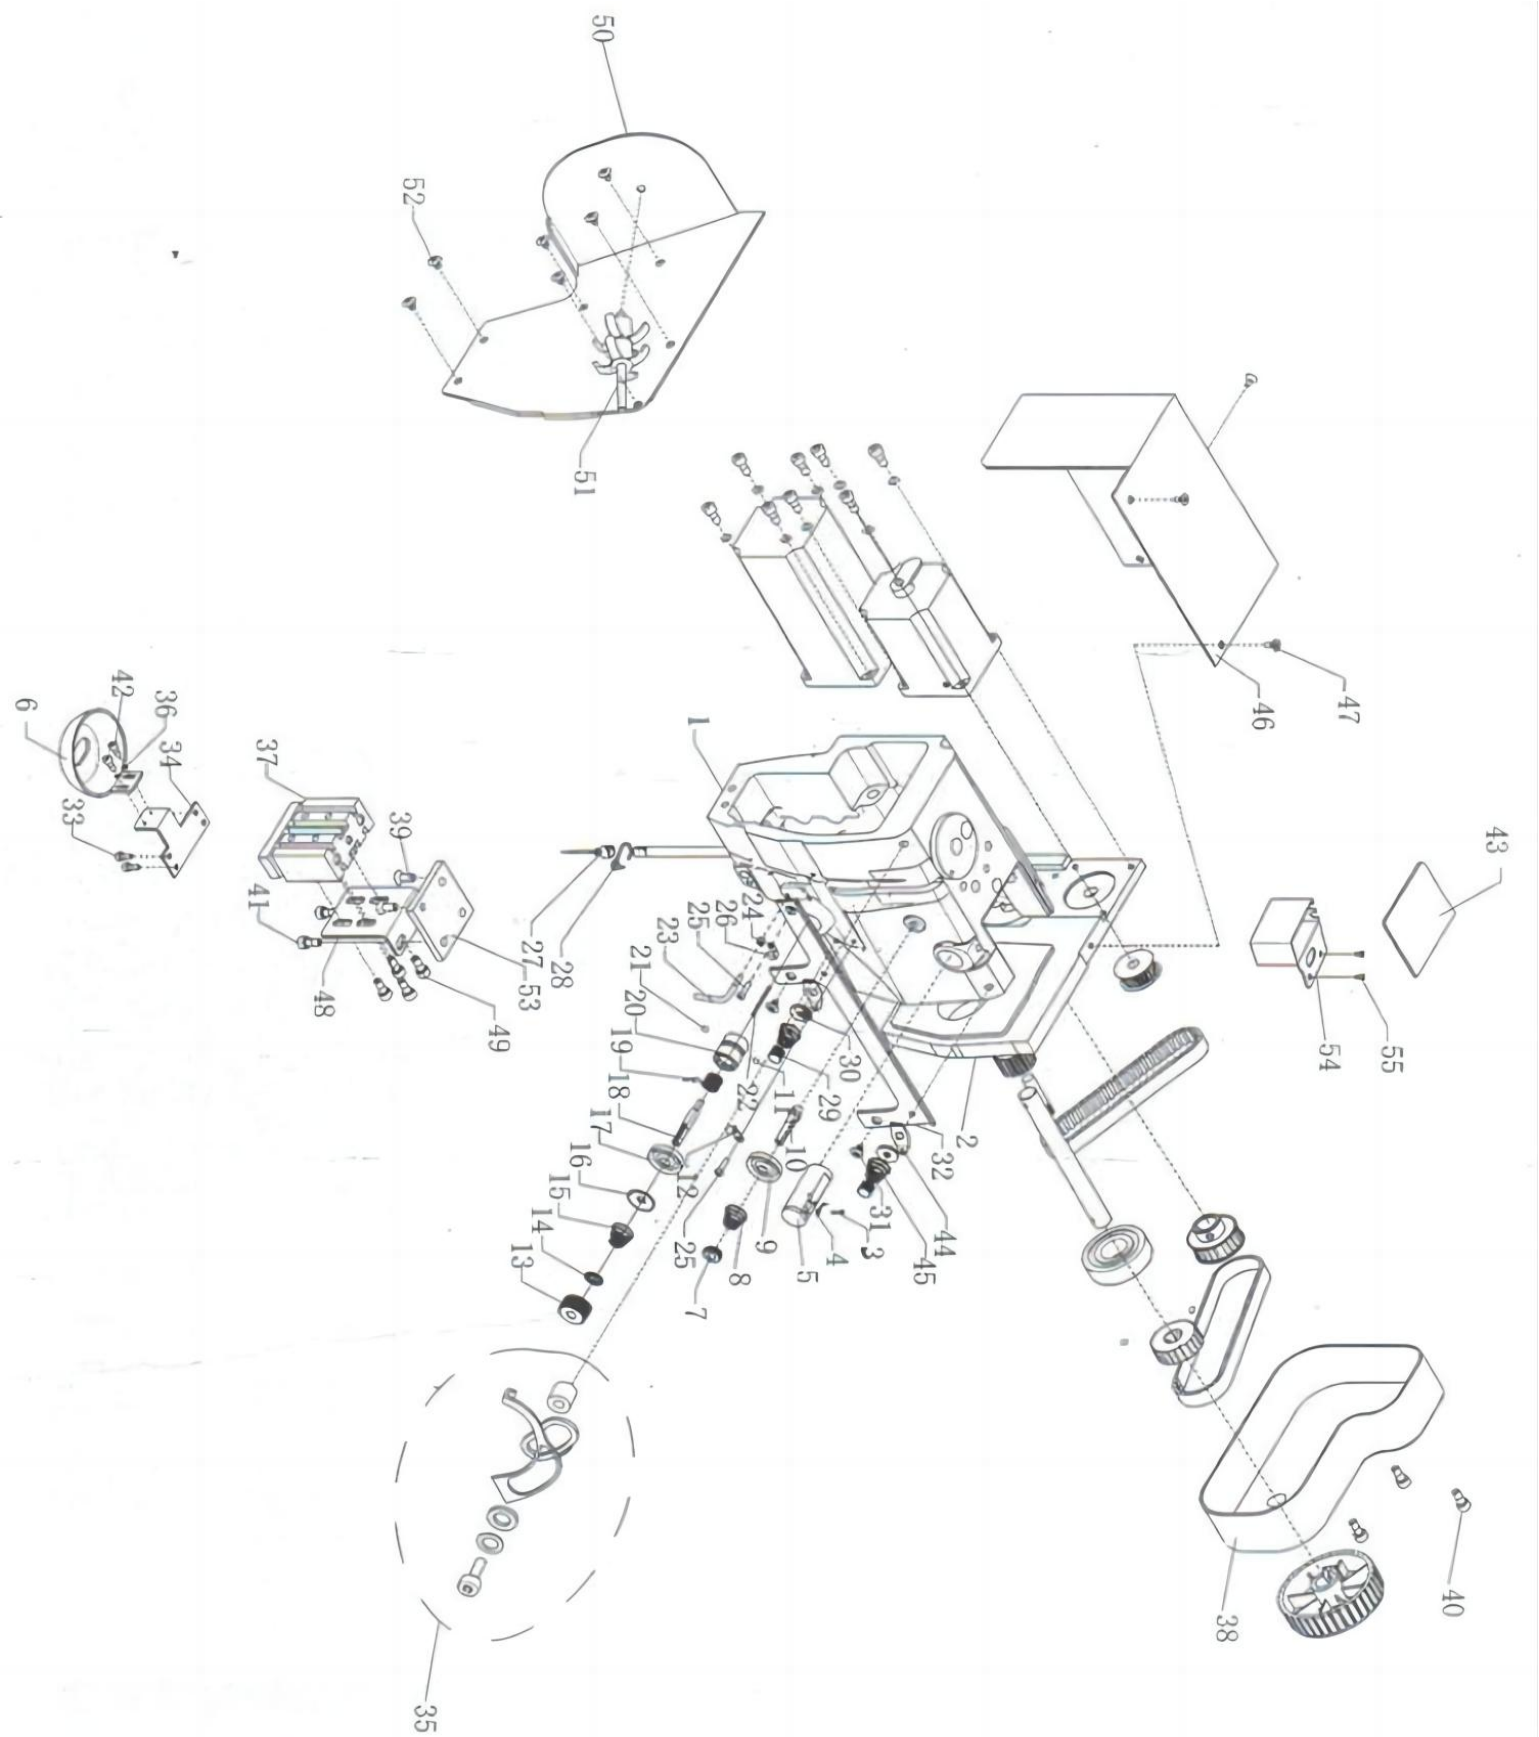


参照号	零部件序号	数量	零部件名称
1	jh2210	1	旋转机头
2	jh2211	1	机头后盖板
3	jh1103	1	螺钉: GB/T67 9/64-40×4
4	jh1104	1	过线勾
5	jh1105	1	线冷却器组件
6	jh2212	1	压脚
7	jh1107	1	夹线螺母
8	jh1108	1	弹簧 1
9	jh1109	2	夹线盘
10	jh1110	1	夹线杆轴 A
11	jh1111	1	螺钉: GB/T78 9/64-40×5
12	jh1112	1	过线器 C
13	jh1113	1	压线螺母 1
14	jh1114	1	止动垫圈
15	jh1115	1	调节弹簧
16	jh1116	1	夹线压盘
17	jh1117	2	夹线盘
18	jh1118	1	夹线杆轴
19	jh1119	1	挑线弹簧 B
20	jh1120	1	夹线座
21	jh1121	1	螺钉: GB/T77 M6×6
22	jh1122	1	松线销
23	jh1123	1	机壳线钩
24	jh1124	1	螺母: GB/T6170 M4
25	jh1125	2	螺钉: GB/T70.2 M5×8
26	jh1126	1	过线导向 B
27	jh1127	1	针杆线导向 A
28	jh1128	1	针杆轴套线导向 D
29	jh2213	2	压线螺母 2
30	jh2214	2	夹线盘
31	jh2215	2	螺钉: GB/T70.3 M6×10
32	jh2216	1	线架 1
33	jh2217	4	螺钉: GB/T70.1 M4×8
34	jh2218	1	压脚固定座
35	jh2219	1	断线器组件
36	jh2220	2	垫圈 GB/T95 3
37	jh2221	1	气缸: MGPM12-10
38	jh2222	1	机头后盖
39	jh2223	2	螺钉: GB/T70.1 M5×10
40	jh2224	3	螺钉: GB/T70.1 M4×12
41	jh2225	2	螺钉: GB/T70.1 M5×10
42	jh2226	2	螺钉: GB/T70.1 M3×6


43	jh2227	1	机头上盖板
44	jh2228	2	过线导向
45	jh2229	2	弹簧 2
46	jh2230	1	电机罩
47	jh2231	3	螺钉: GB/T70.3 M5×8
48	jh2232	1	气缸固定座
49	jh2233	4	螺钉: GB/T70.1 M6×10
50	jh2234	1	机头前盖
51	jh2235	1	线架 2
52	jh2236	6	螺钉: GB/T70.3 M5×10
53	jh2237	1	气缸座垫板
54	jh2333	1	油斗
55	jh2334	2	螺钉: GB/T818 M4×8

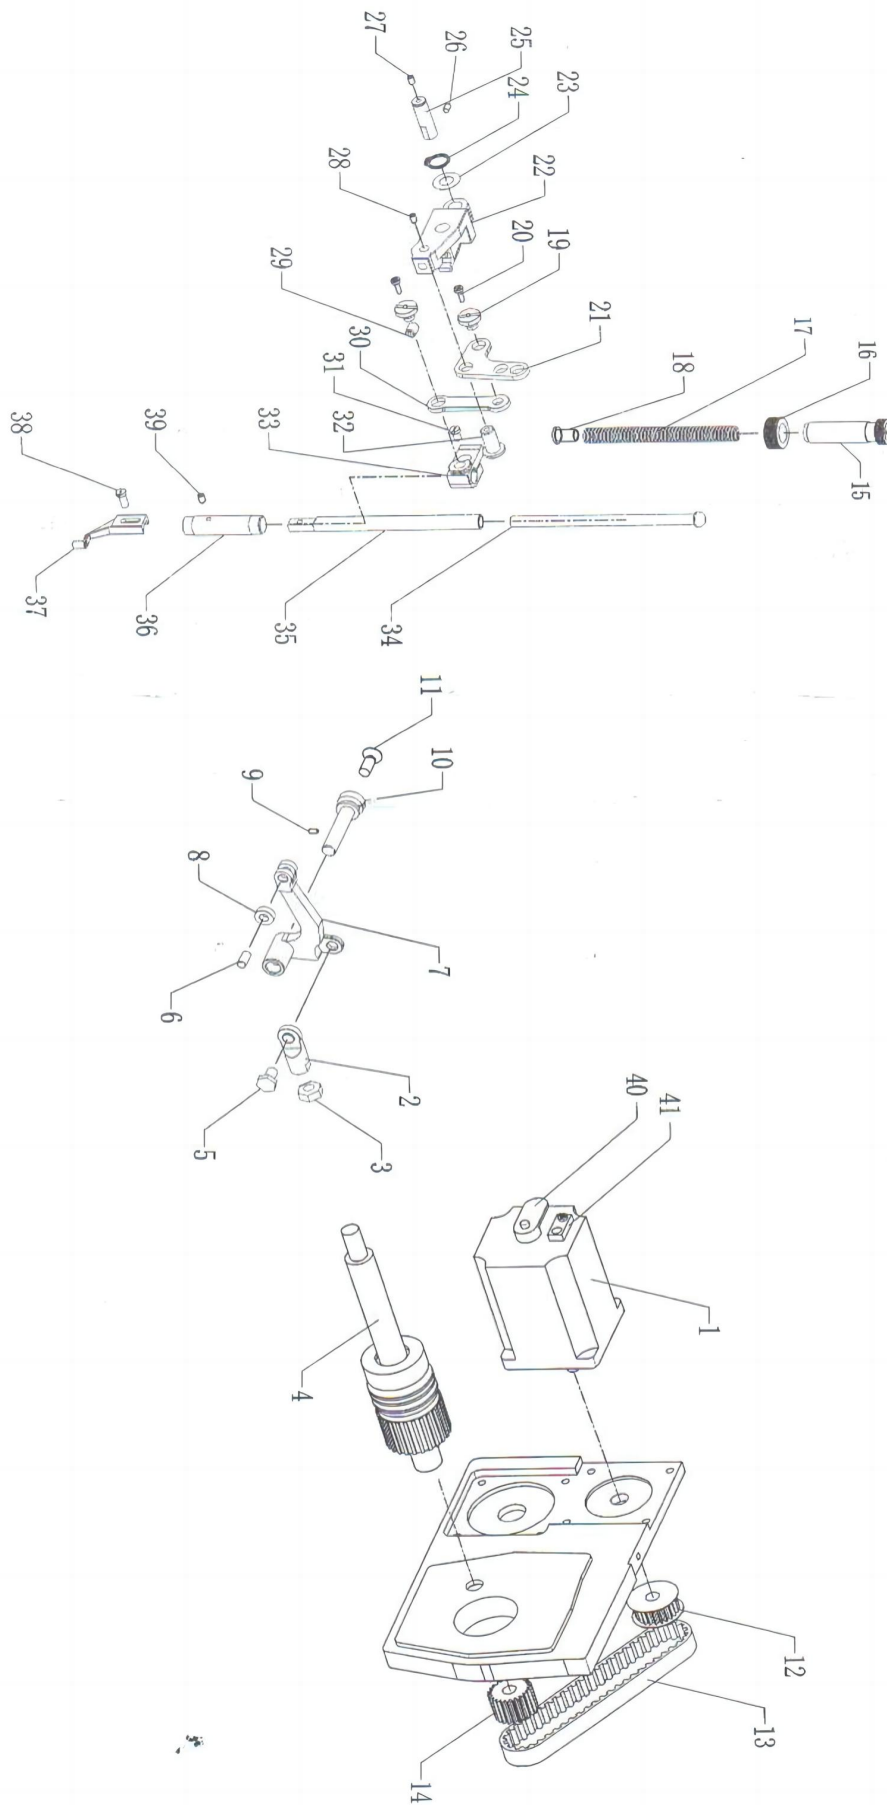

参照号	零部件序号	数量	零部件名称
1	jh2252	1	电机
2	jh1252	2	万向接头
3	jh1253	3	螺钉: GB/T6170 M6
4	jh1254	1	间歇提升连杆
5	jh11255	1	段螺钉 (同参照号 1)
6	jh1256	1	滚轮
7	jh1257	1	间歇提升杆
8	jh1258	1	提升杆滑轮
9	jh1259	1	螺钉: GB/T77 M6×6
10	jh1260	1	提升杆轴
11	jh1261	1	螺钉: 十字头 M4×4
12	jh2253	1	带轮 1-1
13	jh2254	1	传动带 1
14	jh2255	1	带轮 1-2
15	jh1279	1	调节螺栓 M14
16	jh1280	1	调节螺母 M14
17	jh1281	1	弹簧
18	jh1282	1	弹簧管套
19	jh1284	4	段螺钉 6
20	jh1285	4	螺钉: 十字头 M3×4
21	jh1286	1	间歇连杆
22	jh1287	1	连接板
23	jh1288	1	垫圈
24	jh1289	1	轴用挡圈
25	jh1290	1	连接板轴
26	jh1291	1	螺钉: GB/T77 M6×6
27	jh1292	1	螺钉: GB/T77 M4×4
28	jh1293	1	螺钉: GB/T77 M4×4
29	jh1294	1	螺钉: GB/T77 M6×6
30	jh1295	1	间歇连杆 B
31	jh1142	1	螺钉: GB/T70.1 M5×12
32	jh1296	1	连杆轴
33	jh1143	1	压紧杆接头
34	jh1297	1	弹簧导向
35	jh1145	1	压紧杆
36	jh1144	1	压紧杆轴套
37	jh1146	1	压脚 A
38	jh1147	1	螺钉: 9/64-40×12
39	jh1298	1	螺钉: GB/T77 M6×5
40	jh2238	1	限位器
41	jh2239	1	感应器

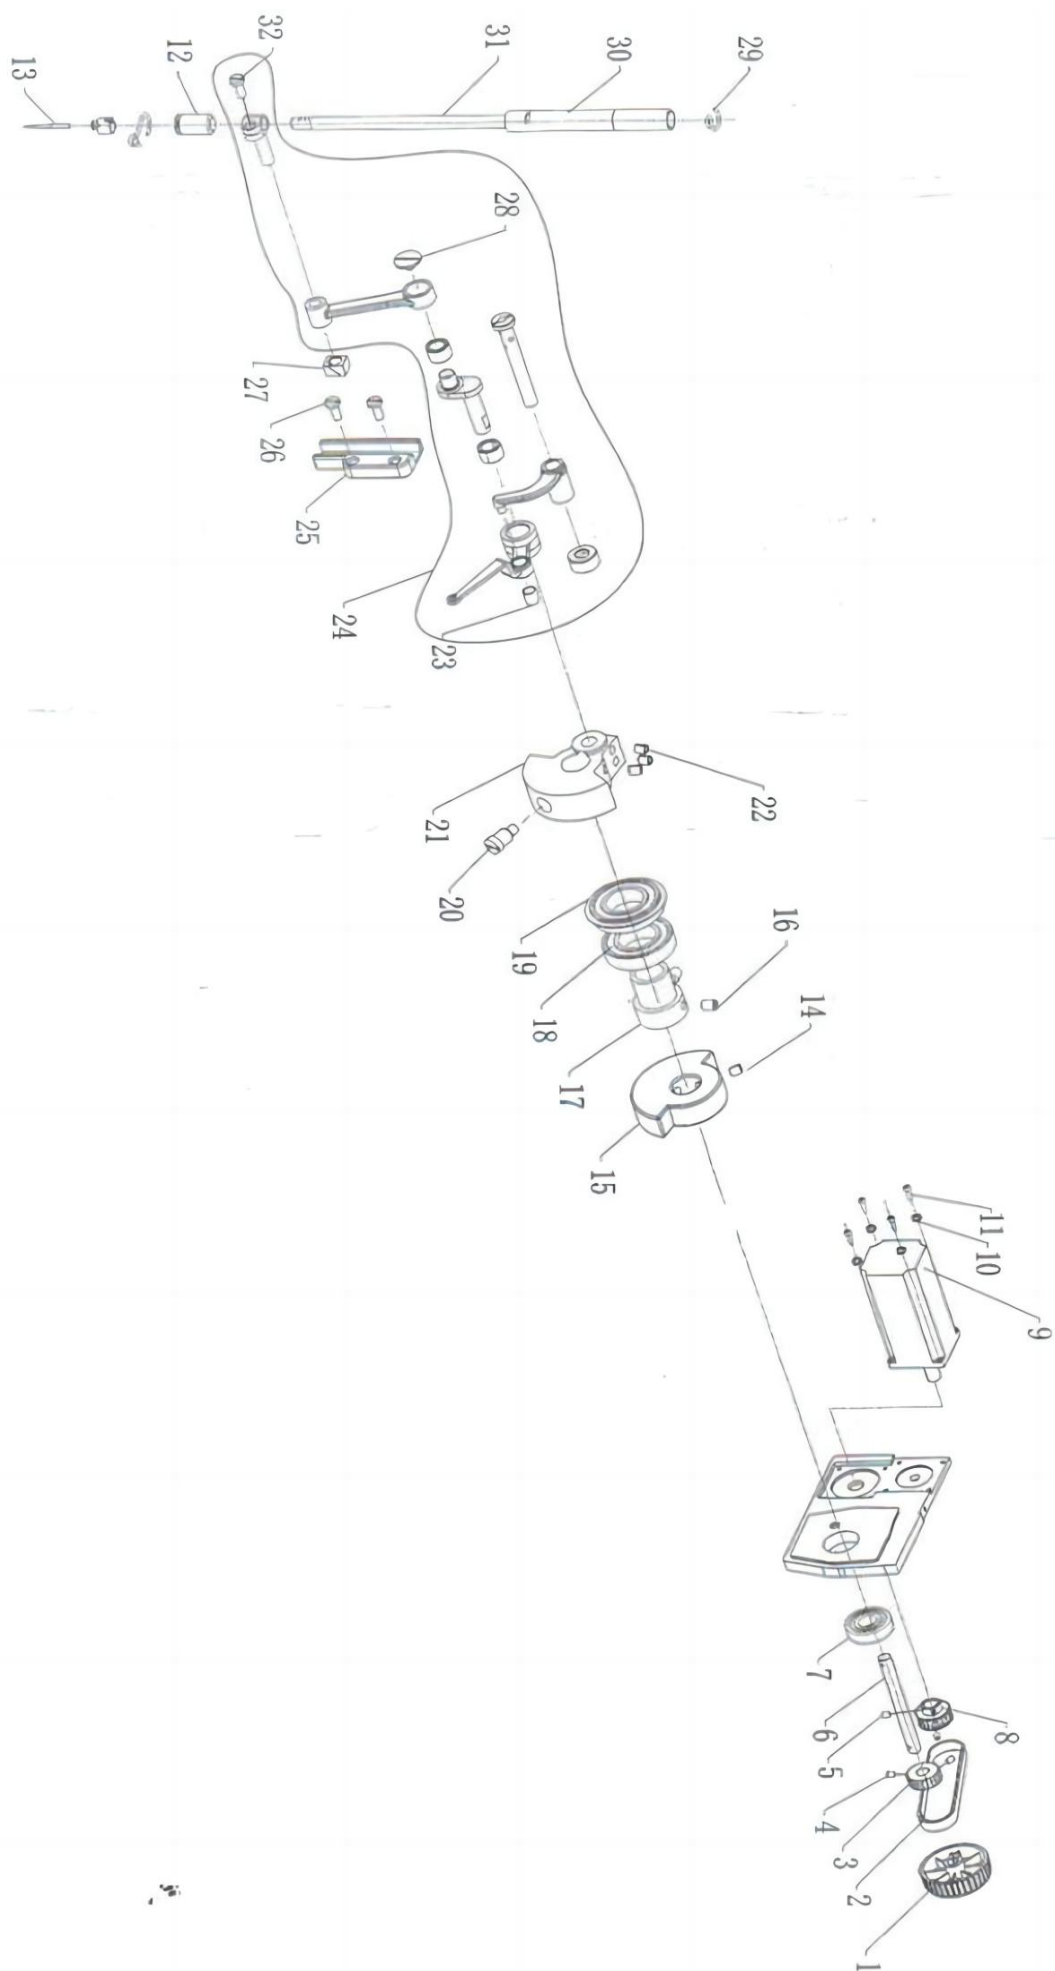


参照号	零部件序号	数量	零部件名称
1	jh2256		上轮
2	jh2257		传动带 2
3	jh2258		带轮 2-1
4	jh2259		螺钉: GB/T77 M5×8
5	jh2260		螺钉: GB/T77 M5×6
6	jh2261		上轮轴
7	jh2262		轴承
8	jh2263		带轮 2-2
9	jh2264		电机
10	jh2265		垫圈 GB/T93 5
11	jh2266		GB/T70.1 5×16
12	jh1192	1	针杆轴套 D
13	jh1193	1	机针
14	jh1173	3	螺钉: GB/T77 M6×0.75×6
15	jh1174	1	卷线驱动轮
16	jh1175	2	螺钉: GB/T77 M6×0.75×6
17	jh1176	1	轴承套
18	jh1177	1	轴承: 6904 ZZCN
19	jh1178	1	轴承: 6904 ZZNR
20	jh1180	1	螺钉 M8
21	jh1181	1	曲柄 G
22	jh1179	3	螺钉: GB/T77 M6×0.75×6
23	jh1182	1	螺钉: GB/T77 M5x5
24	jh1184	1	针杆连杆组件
25	jh1185	1	滑块导向
26	jh1186	2	螺栓: GB/T70.1 M4×16
27	jh1187	1	滑块
38	jh1183	1	螺钉: 9/64-40×6
29	jh1189	1	油线挂钩
30	jh1190	1	针杆轴套 UK
31	jh1191	1	针杆
32	jh1188	1	螺钉 M4x8

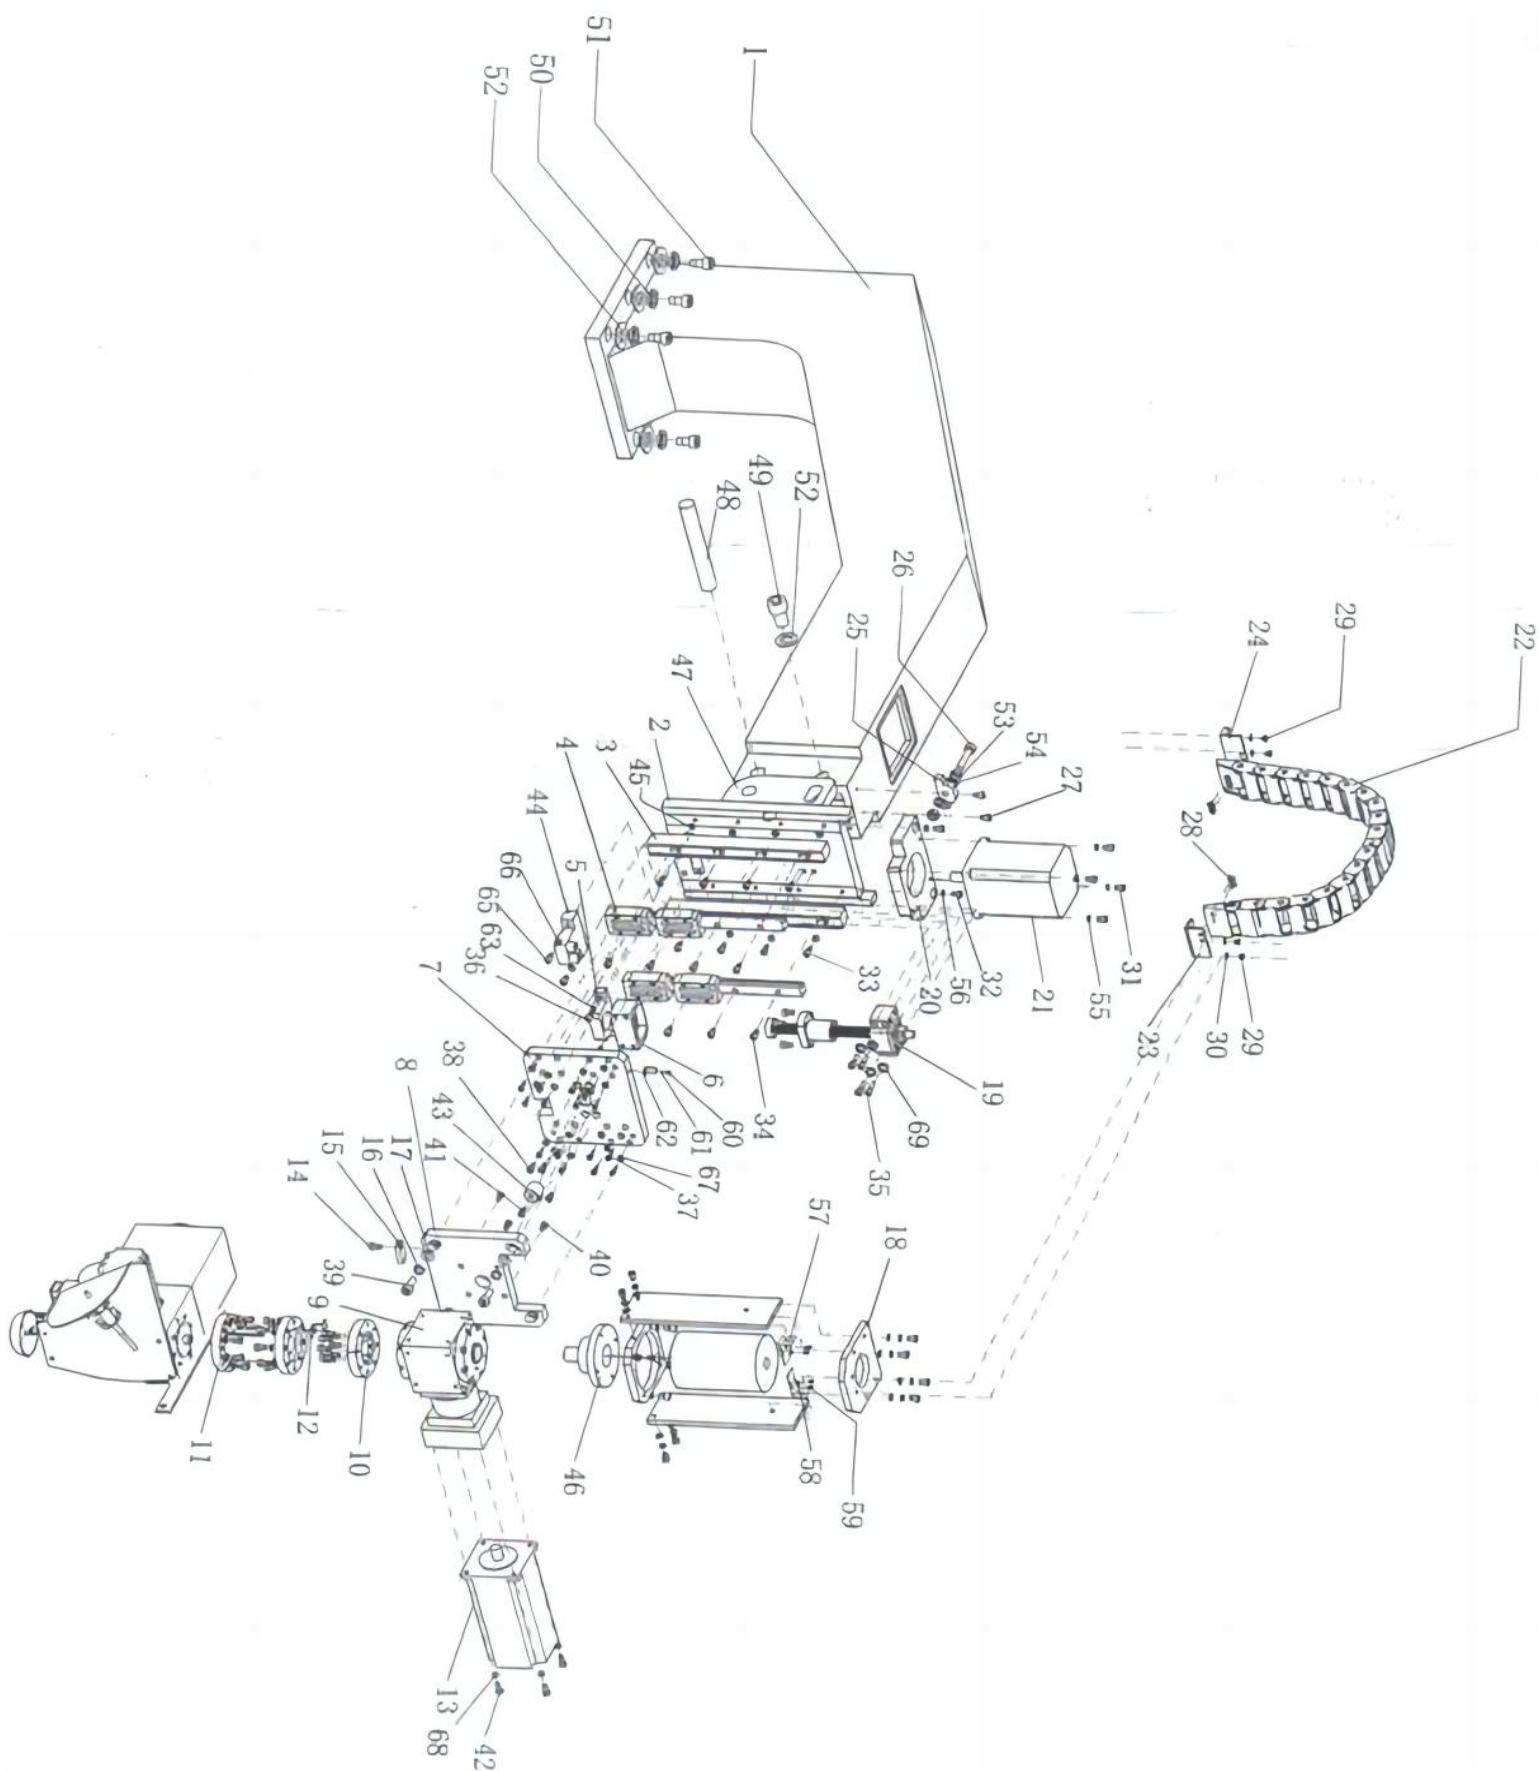


参照号	零部件序号	数量	零部件名称
1	jh2100	1	机体
2	jh2101	1	机体固定座
3	jh2102	2	直线导轨定位条
4	jh2103	2	直线导轨
5	jh2104	1	轴承座
6	jh2105	1	丝杆连接座
7	jh2106	1	机头升降板
8	jh2107	1	减速器底板
9	jh2108	1	减速器
10	jh2109	1	法兰 1-1
11	jh2110	1	法兰 1-2
12	jh2111	1	感应片
13	jh2112	1	电机 1
14	jh2113	1	螺钉 GB/T70.1 M3×8
15	jh2114	1	感应器
16	jh2115	4	垫圈 GB/T93 8
17	jh2116	4	垫圈 GB/T96 8
18	jh2117	1	支架上座
19	jh2118	1	丝杆端座
20	jh2119	1	电机座
21	jh2120	1	电机 2
22	jh2121	1	坦克链 1
23	jh2122	2	坦克链固定座 A
24	jh2123	1	坦克链固定座 B
25	jh2124	1	机头微调座
26	jh2125	1	螺栓 GB/T70.1 M8×65 (全牙)
27	jh2126	2	螺钉 GB/T70.1 M6×25
28	jh2127	4	螺钉 GB/T818 M5×8
29	jh2128	4	螺钉 GB/T70.1 M4×12
30	jh2129	4	垫圈 GB/T93 4
31	jh2130	4	螺钉 GB/T70.1 M5×18
32	jh2131	2	螺钉 GB/T70.1 M8×25
33	jh2132	8	螺钉 GB/T70.1 M5×25
34	jh2133	8	螺钉 GB/T70.1 M4×20
35	jh2134	4	螺钉 GB/T70.1 M6×40
36	jh2135	2	螺钉 GB/T70.1 M6×15
37	jh2136	16	螺钉 GB/T70.1 M4×16
38	jh2137	4	螺钉 GB/T70.1 M5×12
39	jh2138	4	螺钉 GB/T70.1 M8×30
40	jh2139	4	螺钉 GB/T70.1 M6×16
41	jh2140	1	螺钉 GB/T70.1 M5×25
42	jh2141	4	螺钉 GB/T70.1 M6×20

43	jh2142	1	定位柱
44	jh2143	1	限位器
45	jh2144	8	垫圈 GB/T93 5
46	jh2145	1	导电阀环接头
47	jh2146	2	机头调节固定板
48	jh2147	1	销轴
49	jh2148	2	螺栓 GB/T70.1 M16×40
50	jh2149	8	垫圈 GB/T93 16
51	jh2267	6	螺栓 GB/T70.1 M16×50
52	jh2268	8	垫圈 GB/T96 16
53	jh2272	3	GB/T6170 M8
54	jh2273	2	垫圈 GB/T95 8
55	jh2274	4	垫圈 GB/T93 5
56	jh2275	2	垫圈 GB/T93 8
57	jh2276	2	固定片
58	jh2277	2	螺钉 GB/T70.1 M4×8
59	jh2278	4	螺钉 GB/T70.1 M3×8
60	jh2279	1	螺钉 GB/T70.1 M4×10
61	jh2280	1	垫圈 GB/T93 4
62	jh2281	1	感应片
63	jh2282	2	垫圈 GB/T93 6
64	jh2283	4	垫圈 GB/T93 6
65	jh2284	2	螺钉 GB/T70.1 M6×30
66	jh2285	8	垫圈 GB/T93 6
67	jh2286	16	垫圈 GB/T93 4
68	jh2303	4	垫圈 GB/T93 5

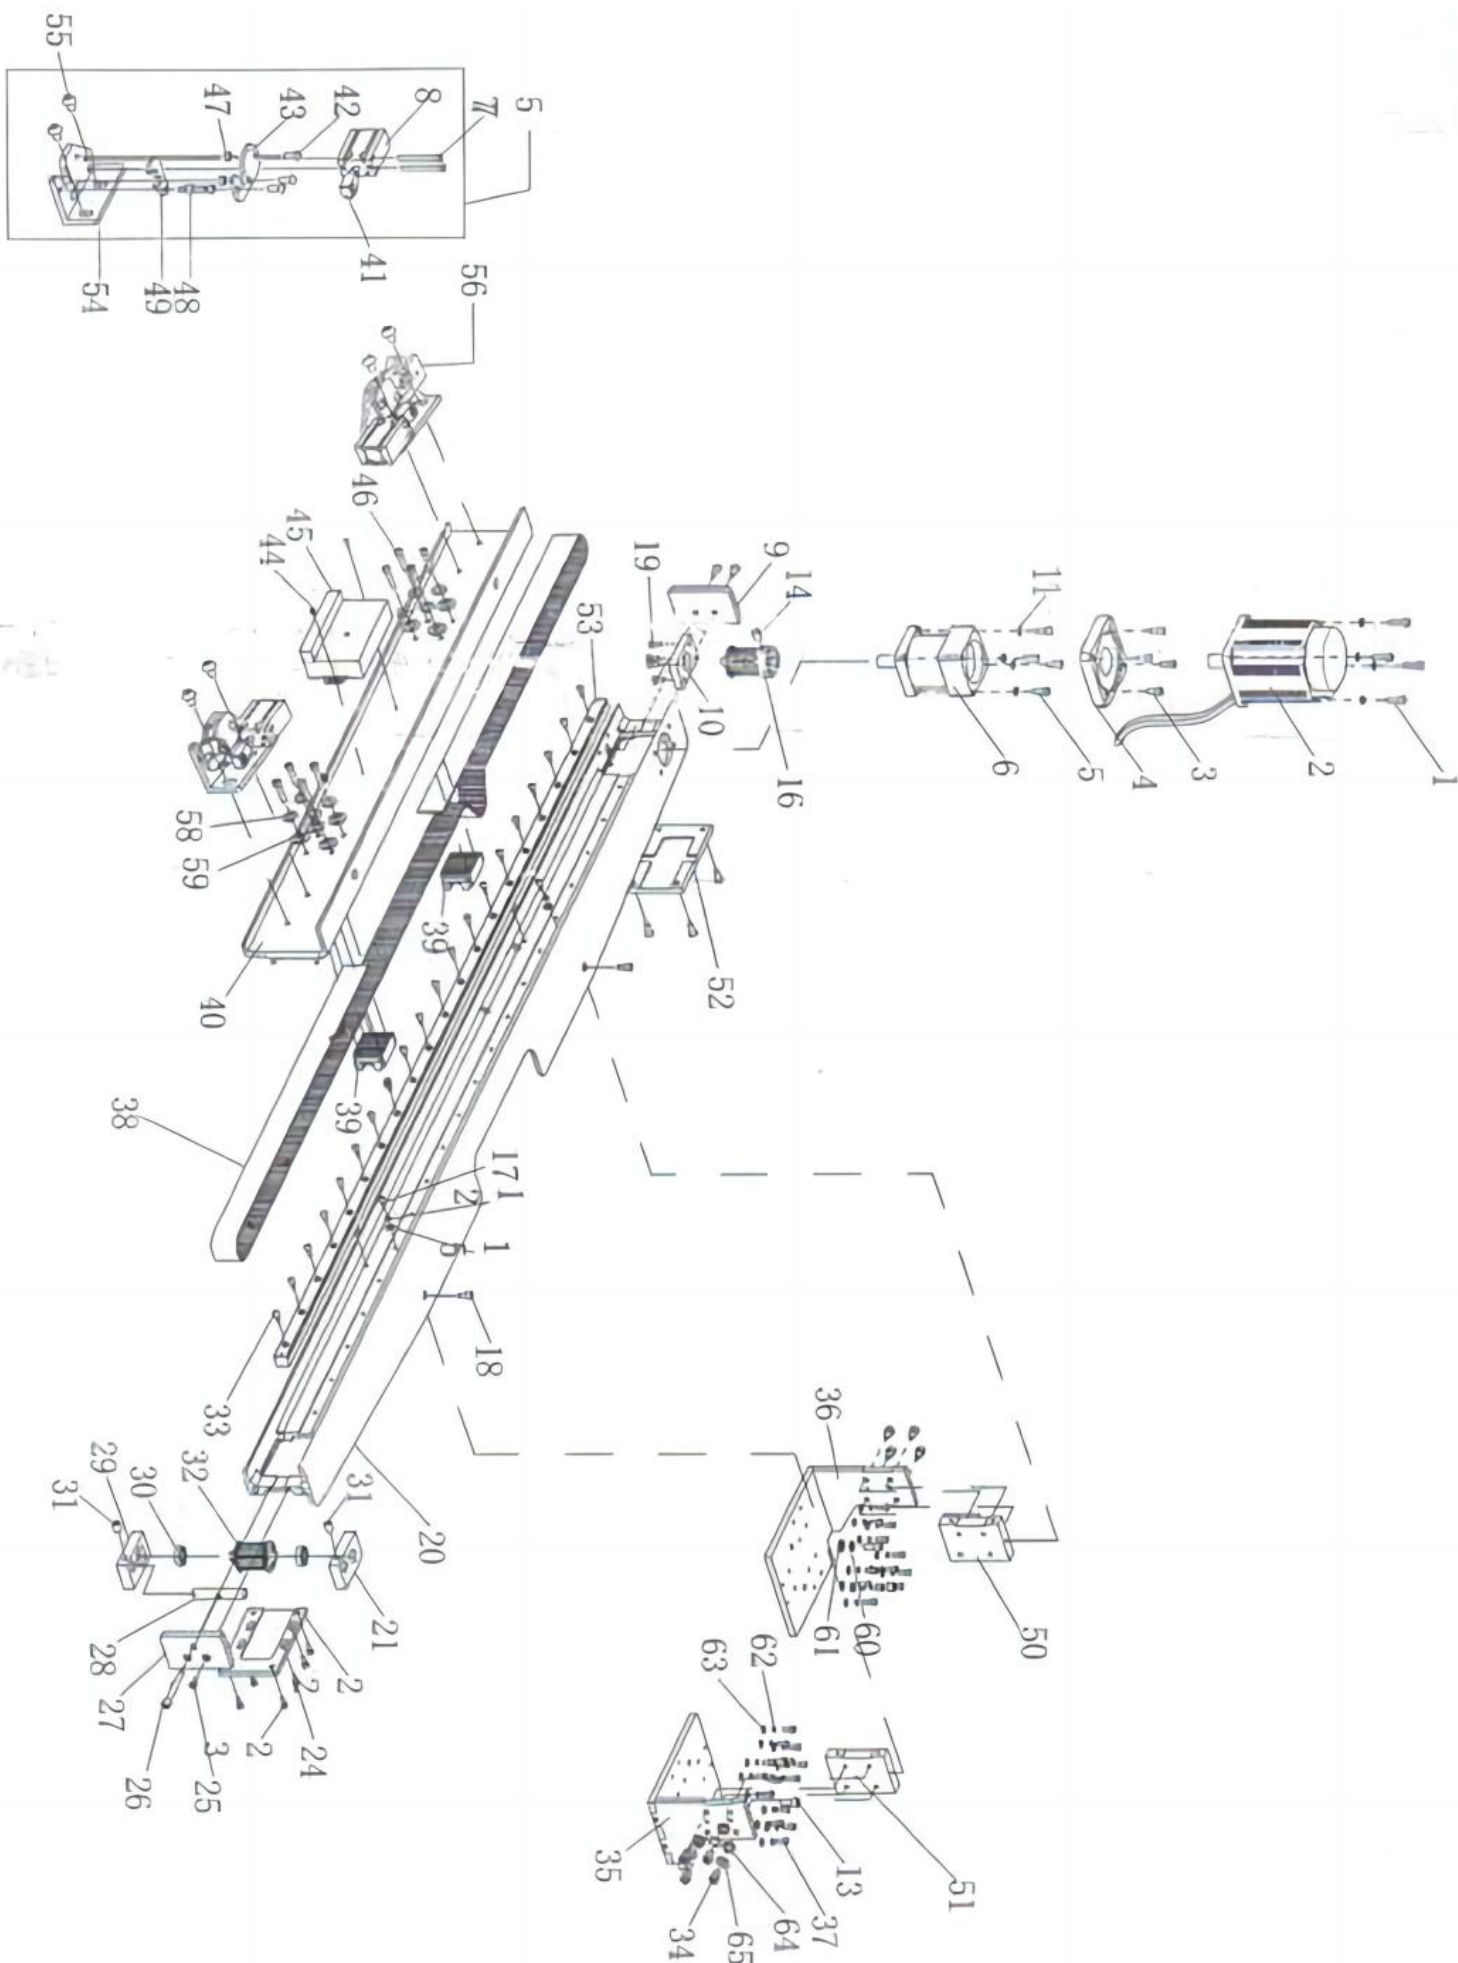


参照号	零部件序号	数量	零部件名称
1	jh1558	4	螺钉: GB/T70.1 M5×20
2	jh1559	1	X—驱动电机
3	jh1560	4	螺钉: GB/T70.1 M5×12
4	jh1561	1	电机板
5	jh1562	4	螺钉: GB/T70.1 M5×16
6	jh1563	1	减速器 1
7	jh1564	4	螺钉: GB/T70.1 M4×36
8	jh1565	2	气缸: CU16-15D
9	jh1509	1	驱动左端盖板
10	jh1510	4	轴承: 6900Z
11	jh1511	8	垫圈 GB/T93 5
12	jh2315	2	垫圈 GB/T93 6
13	jh1513	4	螺钉: GB/T70.1 M6×15
14	jh1514	2	螺钉: GB/T77 M5×8
15	jh2316	2	垫圈 GB/T95 6
16	jh1516	1	带轮 4-1
17	jh1517	4	螺钉: GB/T70.2 M6×25
18	jh1518	2	螺钉: GB/T70.3 M5×12
19	jh1519	4	螺钉: GB/T70.1 M5×16
20	jh1520	1	X—驱动架
21	jh1521	1	X—调节驱动座 (上)
22	jh1522	1	X—驱动后盖板 (右)
23	jh1523	8	螺钉: GB/T70.3 M5×10
24	jh1524	8	螺钉: GB/T70.2 M5×16
25	jh1525	4	螺钉: GB/T70.3 M5×12
26	jh1526	2	螺栓: GB/T70.1 M6×50
27	jh1527	1	X—驱动调节板
28	jh1528	1	X—驱动调节杆
29	jh1529	1	X—调节驱动座 (下)
30	jh1530	4	轴承: 6900Z
31	jh1531	4	螺钉: GB/T77 M5×5
32	jh1532	2	带轮 4-2
33	jh1533	20	螺钉: GB/T70.1 M4×12
34	jh1534	8	螺钉: GB/T70.1 M6×25
35	jh1535	1	XY 连接板 (右)
36	jh1536	4	XY 连接板 (左)
37	jh1537	24	螺钉: GB/T70.1 M4×16
38	jh1538	1	同步带
39	jh1539	2	直线驱动滑块
40	jh1540	1	X—模板座
41	jh1566	2	夹头滑动块
42	jh1567	6	螺钉: GB/T70.2 M5×13

43	jh1568	2	夹头上板
44	jh1544	2	螺钉: GB/T818 M3×8
45	jh1545	1	感应器外罩
46	jh1546	8	螺钉: GB/T70.1 M4×16
47	jh1569	6	垫圈
48	jh1570	2	小轴
49	jh1571	2	锁紧板
50	jh1550	1	XY 连接固定板 (左)
51	jh1551	1	XY 连接固定板 (右)
52	jh1552	1	X—驱动后盖板 (左)
53	jh1553	1	直线导轨
54	jh1572	1	夹头座 (右)
55	jh1573	4	螺钉: GB/T70.2 M6×15
56	jh1574	1	夹头座 (左)
57	jh1556	2	卡模板装置
58	jh2317	8	垫圈 GB/T93 4
59	jh2318	8	垫圈 GB/T95 4
60	jh2319	4	垫圈 GB/T93 6
61	jh2320	4	垫圈 GB/T95 6
62	jh2321	24	垫圈 GB/T93 4
63	jh2322	24	垫圈 GB/T95 4
64	jh2323	8	垫圈 GB/T95 6
65	jh2324	8	垫圈 GB/T93 6

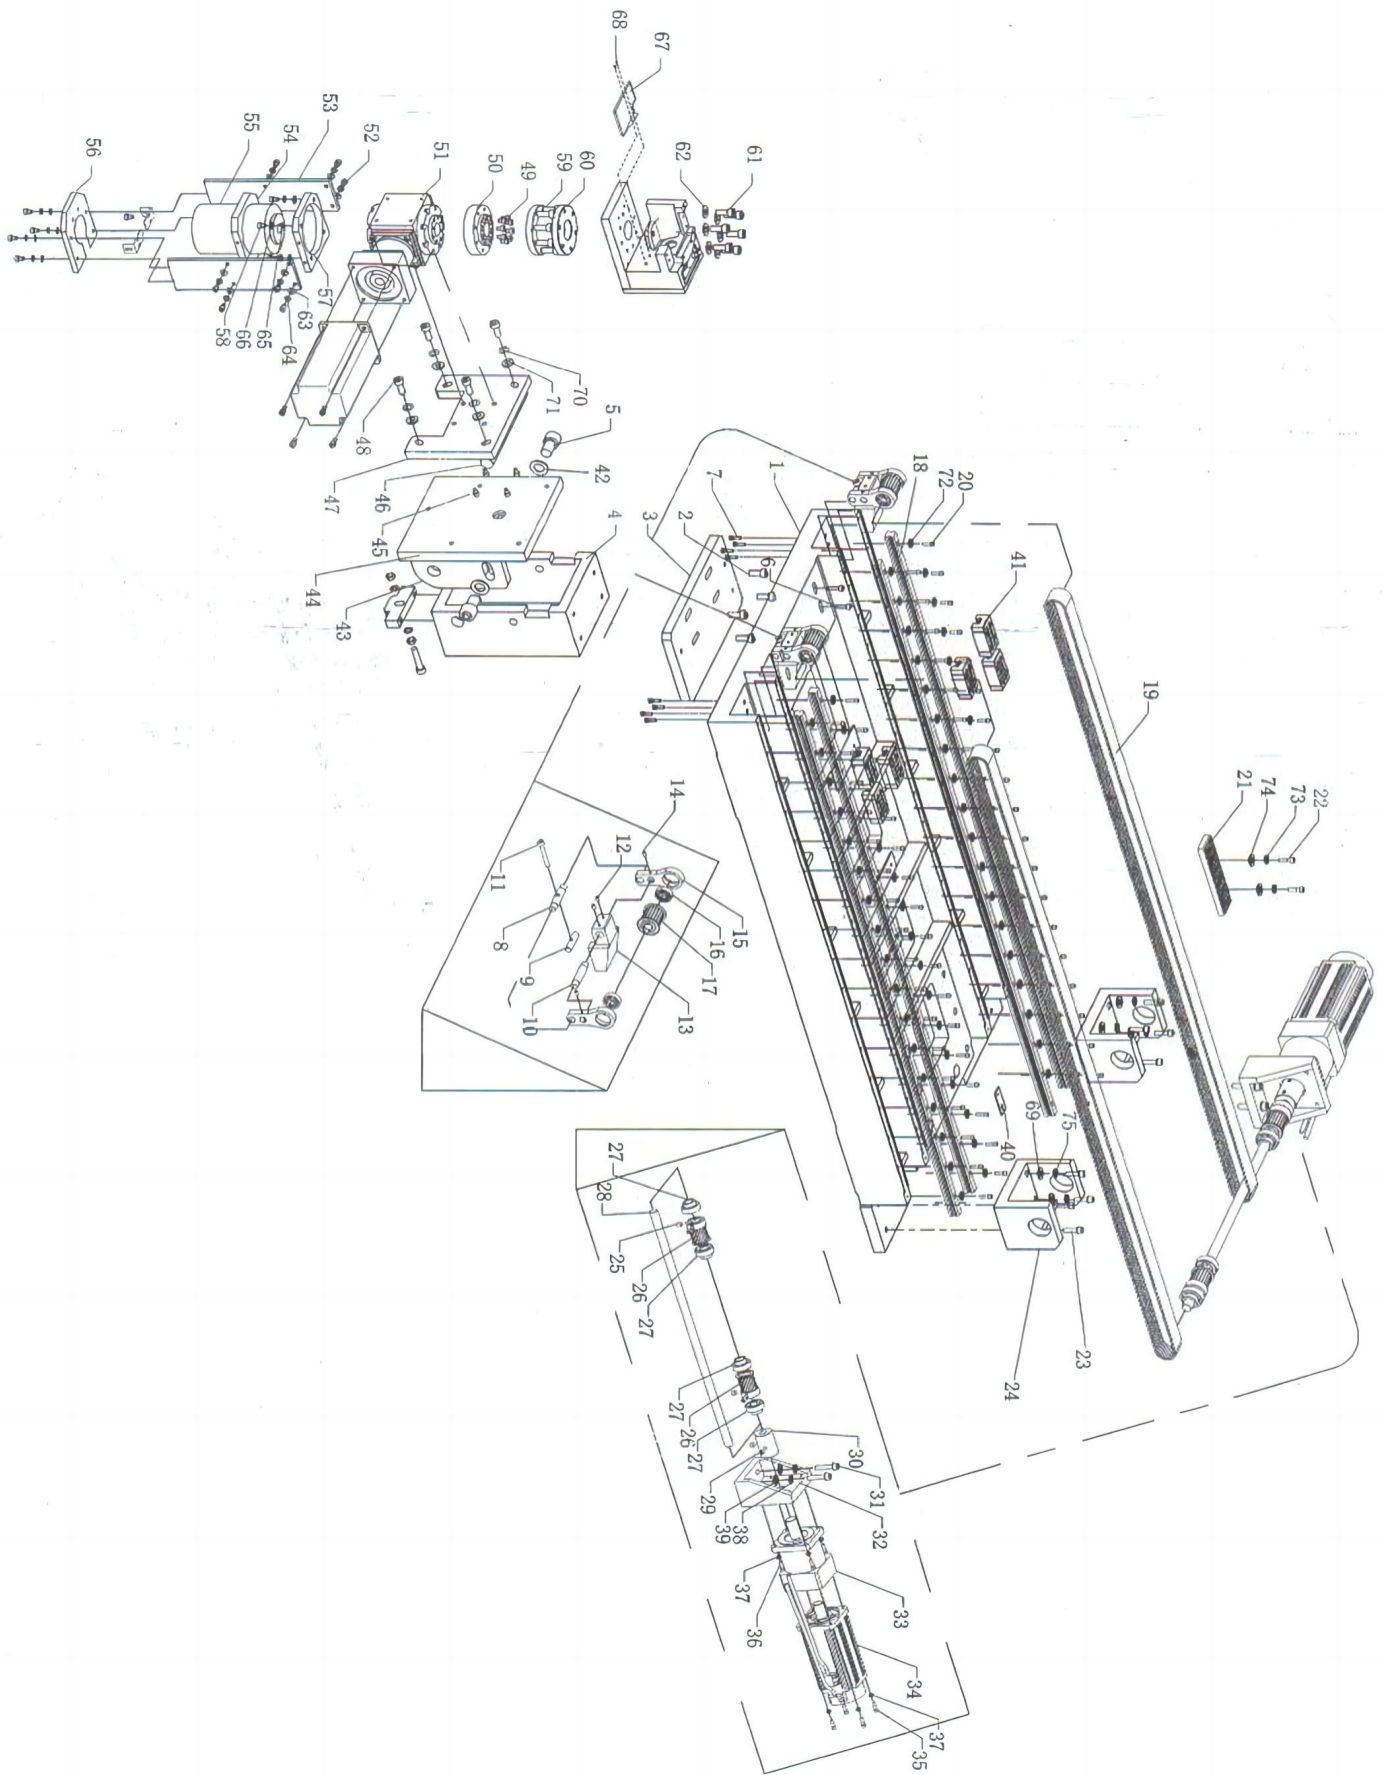

参照号	零部件序号	数量	零部件名称
1	jh1848	1	Jh-XZ900 底板
2	jh2176	4	螺钉 GB/T70.1 M8×25
3	jh2177	1	替板
4	jh2178	1	固定座
5	jh2179	2	螺栓 GB/T70.1 M14×40
6	jh1806	4	螺栓: GB/T70.1 M6×35
7	jh1807	8	螺栓: GB/T70.1 M6×50
8	jh1808	2	Y—张紧调节连接杆
9	jh1809	2	Y—张紧调节螺母
10	jh1810	2	Y—张紧座连接杆
11	jh1811	2	螺栓: GB/T70.1 M6×45
12	jh1812	4	螺钉: GB/T77 M5×6
13	jh1813	2	Y—同步带张紧座
14	jh1814	4	螺钉: GB/T77 M5×6
15	jh1815	4	轴承座 3-1
16	jh1816	4	轴承
17	jh1817	2	Y—张紧带轮
18	jh1818	2	Y—直线导轨
19	jh1819	2	传动带
20	jh1820	22	螺钉: GB/T70.1 M4×18
21	jh1821	2	Y—传动带连接板
22	jh1822	4	螺钉: GB/T70.1 M6×30
23	jh2304	8	螺钉 GB/T70.1 M10×45
24	jh2305	2	轴承座 3-2
25	jh1825	4	螺钉: GB/T77 M8×8
26	jh1826	2	Y—传动轮
27	jh1827	4	轴承
28	jh1828	1	Y—驱动轴
29	jh1836	4	螺钉: GB/T77 M8×8
30	jh1837	1	连接套
31	jh1838	2	螺钉: GB/T70.1 M8×40
32	jh1839	1	Y—驱动电机座
33	jh1840	1	减速器 3-1
34	jh1841	1	Y—驱动电机
35	jh1842	4	螺钉: GB/T70.1 M6×20
36	jh1842	4	螺钉: GB/T 70.1 M6×25
37	jh1843	16	垫圈 GB/T93 6
38	jh1844	2	垫圈 GB/T93 8
39	jh1845	2	垫圈 GB/T95 8
40	jh2306	1	感应器固定片
41	jh1847	6	直线导轨滑块
42	jh2180	2	垫圈 GB/T96 14

43	jh2181	2	梭箱调节固定板
44	jh2182	1	梭箱固定座
45	jh2183	4	螺钉 GB/T70.1 M6×16
46	jh2184	1	圆销
47	jh2185	1	减速器固定板
48	jh2186	4	螺钉 GB/T70.1 M8×30
49	jh2187	8	螺钉 GB/T70.1 M5×14
50	jh2109	1	法兰 2-1
51	jh2108	1	减速器
52	jh2140	12	螺钉 GB/T70.1 M5×16
53	jh2116	2	支架侧板
54	jh2115	1	固定板
55	jh2113	1	导电阀环
56	jh2188	1	支架滑板
57	jh2114	1	支架底座
58	jh2189	4	螺钉 GB/T70.1 M6×20
59	jh2190	8	螺钉 GB/T70.1 M6×18
60	jh2191	1	法兰 2-2
61	jh2192	6	螺钉 GB/T70.1 M6×18
62	jh2287	6	垫圈 GB/T93 6
63	jh2288	2	垫圈 GB/T95 5
64	jh2289	2	垫圈 GB/T93 5
65	jh2290	4	垫圈 GB/T95 6
66	jh2291	4	垫圈 GB/T93 6
67	jh2292	1	油盘
68	jh2293	2	螺钉 GB/T70.1 M4×8
69	jh2306	8	垫圈 GB/T95 10
70	jh2327	4	垫圈 GB/T93 8
71	jh2328	4	垫圈 GB/T95 8
72	jh2329	72	垫圈 GB/T93 4
73	jh2330	4	垫圈 GB/T93 6
74	jh2331	4	垫圈 GB/T95 6
75	jh2332	8	垫圈 GB/T93 10

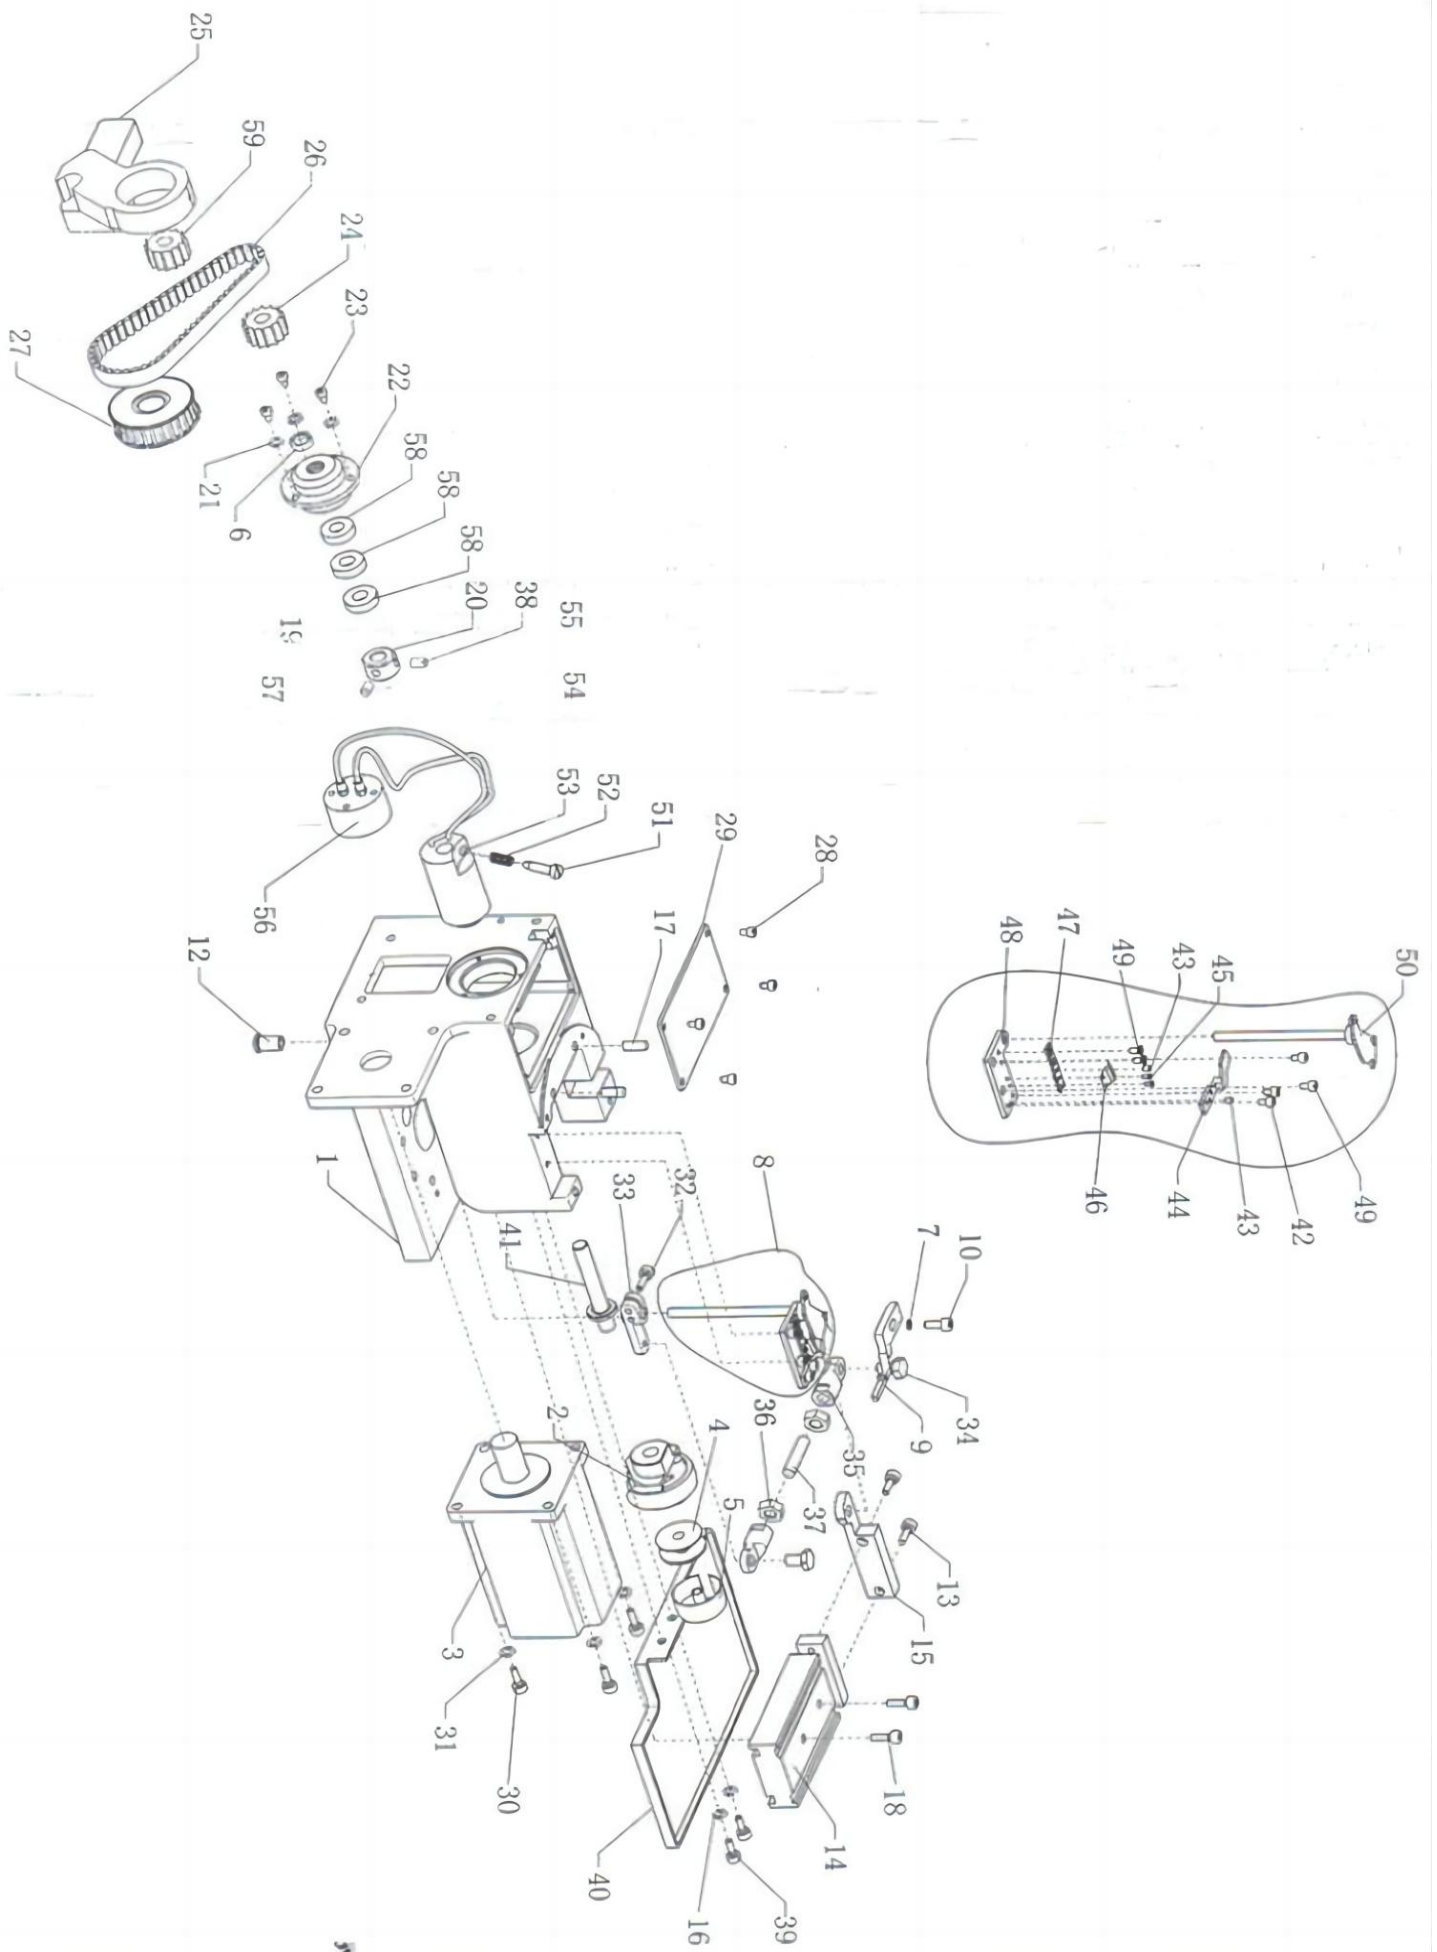

参照号	零部件序号	数量	零部件名称
1	jh1301	1	梭箱体
2	jh1302	1	旋梭
3	jh2193	1	电机
4	jh1304	1	梭心
5	jh1305	1	梭壳
6	jh2326	1	油封
7	jh2194	1	垫圈 GB/T93 4
8	jh1308	1	剪线刀座
9	jh1309	1	旋梭定位勾
10	jh1310	1	螺钉: GB/T70.1 M4×10
11	jh2302	1	带轮 3-3
12	jh1312	1	轴套
13	jh1313	2	螺钉: GB/T70.1 M4×10
14	jh1314	1	剪线气缸: CXSM10-25
15	jh1315	1	剪线气缸连接板
16	jh2195	2	垫圈 GB/T93 4
17	jh2196	2	定位销 $\phi 5$
18	jh1318	2	螺钉: GB/T70.1 M4×16
20	jh1320	1	紧圈
21	jh2197	3	垫圈 GB/T93 4
22	jh1322	1	轴套油盖
23	jh1323	3	螺钉: GB/T70.1 M4×12
24	jh2198	1	带轮 3-1
25	jh2199	1	油泵固定架
26	jh2200	2	传动带 3
27	jh2201	2	带轮 3-2
28	jh2202	4	螺钉: GB/T70.3 M3×6
29	jh2203	1	梭箱上盖板
30	jh2204	1	螺钉: GB/T70.1 M5×6
31	jh2205	3	垫圈 GB/T93 5
32	jh1332	1	螺钉: GB/T70.1 M5×12
33	jh1333	1	剪线连接座
34	jh1334	2	螺钉: GB/T27 M6×13
35	jh1335	2	万向接头
36	jh1336	2	螺母: GB/T6170 M6
37	jh1337	1	剪线连接杆
38	jh2206	2	螺钉: GB/T77 M5×8
39	jh2207	6	螺钉: GB/T70.1 M4×10
40	jh2208	1	油盘
41	jh2209	1	旋梭轴
42	jh1342	2	螺钉: GB/T70.1 M4×8
43	jh1343	1	螺钉: GB/T77 M3×3

44	jh1344	1	剪线定刀
45	jh1345	2	螺钉: GB/T818 M×L
46	jh1346	1	剪线夹线片
47	jh1347	1	夹线片调节板
48	jh1348	1	剪线座
49	jh1349	4	螺钉: GB/T70.1 M3×4
50	jh1350	1	动刀
51	jh2294	1	调节螺钉 1
52	jh2295	1	弹簧 1
53	jh2296	1	出油调节器
56	jh2299	1	油泵
58	jh2301	3	轴承